


## Radiant Pex Unwinder Assembly Instructions

### Componets & Tools

Before you begin constructing the RadiantPEX Unwinder make sure the following componets and tools are present.

- [2] Hold Down Arms
- [2] Extension Arms
- [1] Upper Corner Post
- [4] Upper Arm Coil Rests
- [1] Swing Arm
- [1] Lower Center Post
- [4] Base Legs
- [2] Wing Nuts

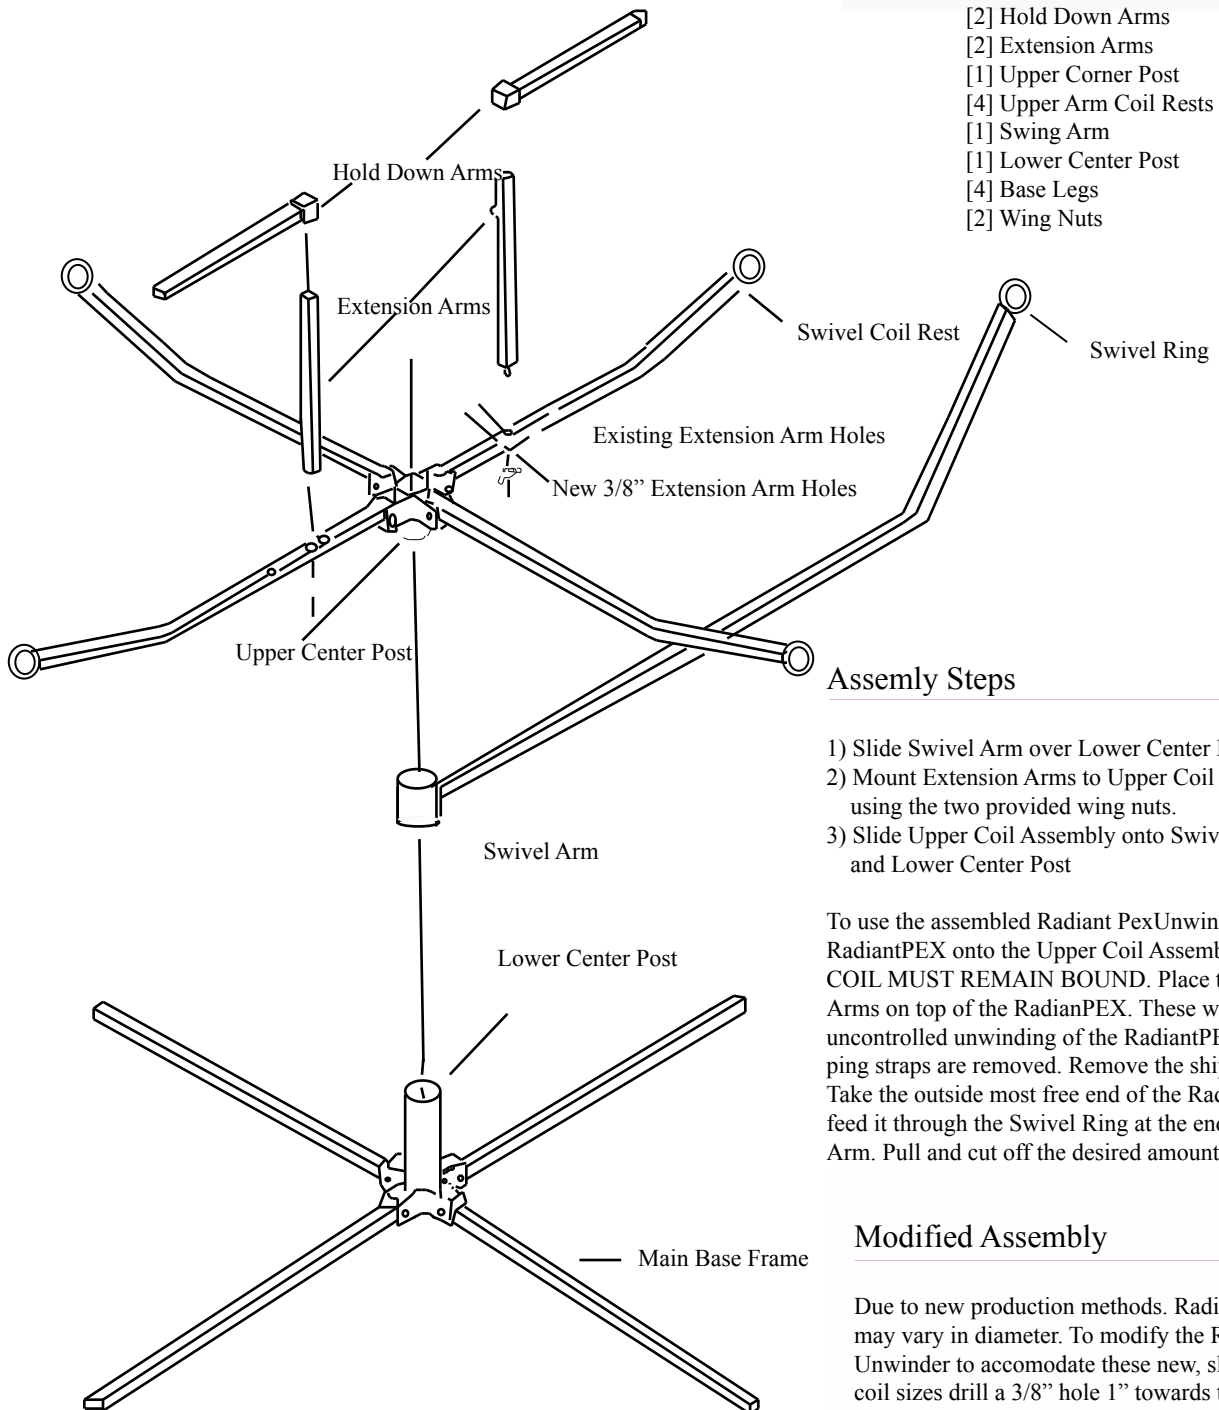

### Assembly Steps

- 1) Slide Swivel Arm over Lower Center Post.
- 2) Mount Extension Arms to Upper Coil Assembly using the two provided wing nuts.
- 3) Slide Upper Coil Assembly onto Swivel Arms and Lower Center Post

To use the assembled Radiant PexUnwinder, lay RadiantPEX onto the Upper Coil Assembly, The COIL MUST REMAIN BOUND. Place the Hod Down Arms on top of the RadianPEX. These will prevent uncontrolled unwinding of the RadiantPEX as the ping straps are removed. Remove the shipping strap. Take the outside most free end of the RadiantPEX and feed it through the Swivel Ring at the end of the Swing Arm. Pull and cut off the desired amount of RadiantPEX.

### Modified Assembly

Due to new production methods. RadiantPEX coils may vary in diameter. To modify the RadiantPEX Unwinder to accomodate these new, slightly smaller coil sizes drill a 3/8" hole 1" towards the center from the existing Extension Arm Hole on the Swing Coil Rest